



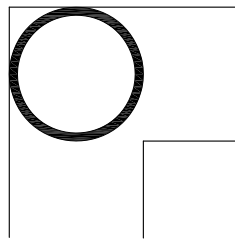




Chadsworth Columns

Load-Bearing Applications

Beam equal to diameter at top of column shaft.


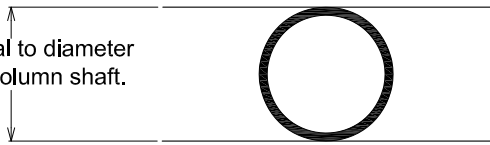


Minimum beam width = top dia. x 3/4

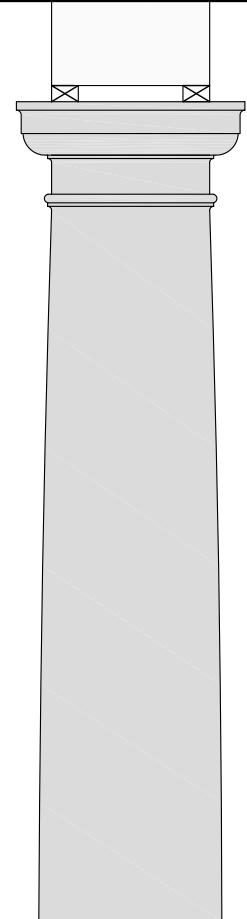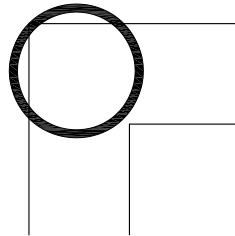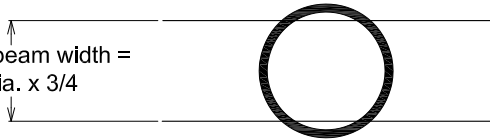

Acceptable Applications

Beam not placed concentrically over top of column shaft.

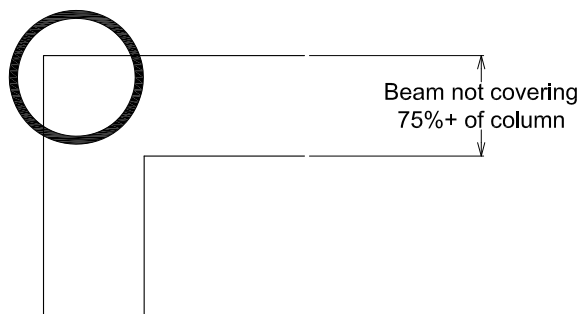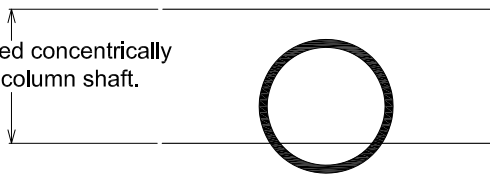

Beam not covering 75%+ of column

Unacceptable Applications

CHADSWORTH INCORPORATED

277 NORTH FRONT STREET ■ WILMINGTON, NC 28401 ■ PHONE: 1.800.486.2118 ■ FACSIMILE: 1.910.763.3191 ■ E-MAIL: sales@columns.com