


CHADSWORTH INCORPORATED

POLYSTONE® BALUSTRADES

FINISHING TIPS

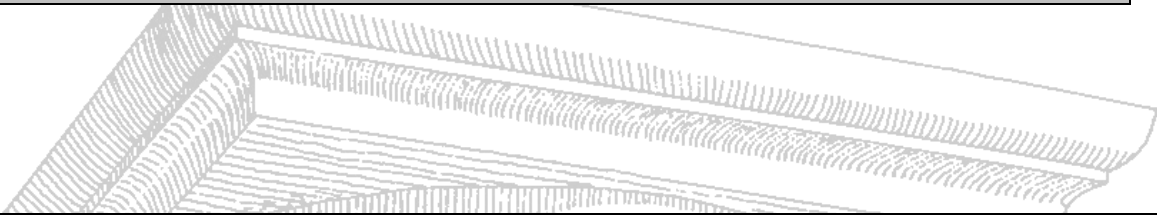

FINISHING & PAINTING

1. Make sure all surfaces are clean prior to painting. Use mineral spirits if oil or alkyd products are used. Warm soapy water should be used if latex products are utilized. Balusters/Components should not be sprayed or pressure washed prior to installation.
2. The balustrade system should be primed and painted. When painting, utilize a high-quality exterior latex paint.
3. Paint should always be applied with a brush – *spray painting is not recommended.*
4. To preserve and protect the balustrade system from ultraviolet rays, use a good, high-quality exterior paint. At least one coat of primer and two coats of final paint should be applied prior to installation.
5. Follow paint manufacturer's instructions concerning use within the temperature ranges for best results.
6. Do not use paint or solvents containing acetone.

