


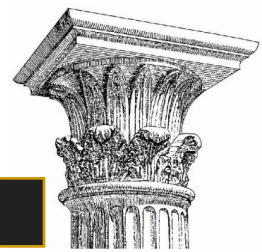

# CHADSWORTH COLUMNS



## STANDARD DOOR SURROUND – INSTALLATION

### Step 1. Determine Door Opening Size (X Dimension)

Measure the width of your door or door opening. Determine whether brickmold is required. (Storm doors require brickmold.) See Figure 2.

### Step 2. Determine Crosshead Width (A Dimension)

Measure the width of the pilaster and multiply x 2. Add the “X” dimension calculated in Step 1. This is the length of the crosshead breastboard required.

If you are not using a custom-fit crosshead and your *crosshead is too long*, cut it in half and trim from the center to the appropriate length and then use a keystone to cover the cut.

If your *crosshead is too short*, you will need to order a second crosshead and piece them together at the center and then use a keystone to cover the cut.

### Step 3. Install Pilaster, Crosshead and Keystone

Affix each piece to the wall using a premium polyurethane adhesive and mechanical fasteners (screws or nails).

**Please Read And Follow All Installation Instructions Carefully**

#### Important Information:

Use only premium polyurethane construction adhesive and mechanical fasteners (screws or nails) to install the door surround.

### Typical Exterior Set-Up

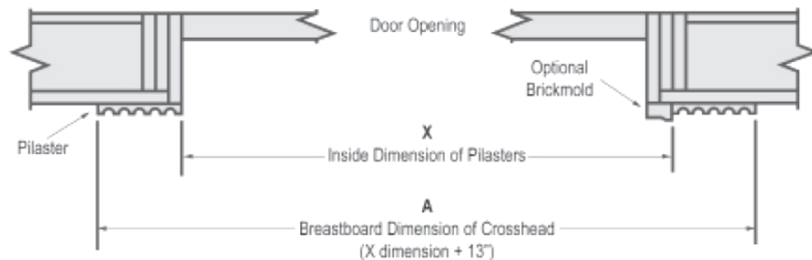


FIGURE 1

### Typical Interior Set-Up

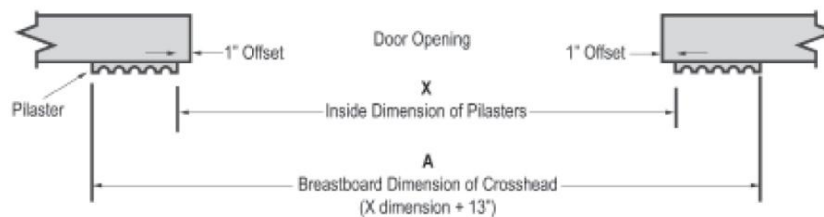


FIGURE 2



Create a Shorter Length by Trimming and adding the Keystone or Accomodate a Larger Opening by using Two Crossheads & a Keystone

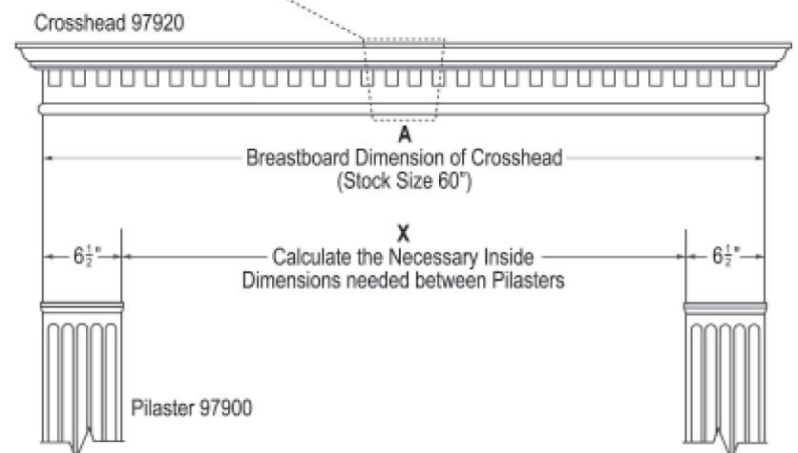


FIGURE 3