

CHADSWORTH COLUMNS



FRP COMPOSITE BASES – INSTALLATION


INSTALLING FRP COMPOSITE BASES

NOTE: Please read this entire instruction manual before assembly.

IMPORTANT: Handle pre-finished column with care. Do not remove plastic wrap until after installation.

CLEANING: Use soap and water, Tilex or equivalent to clean columns. Do NOT use bleach or other harsh chemicals.

Column Alteration: Use circular saw with carbide tipped blade if cut to height is needed.

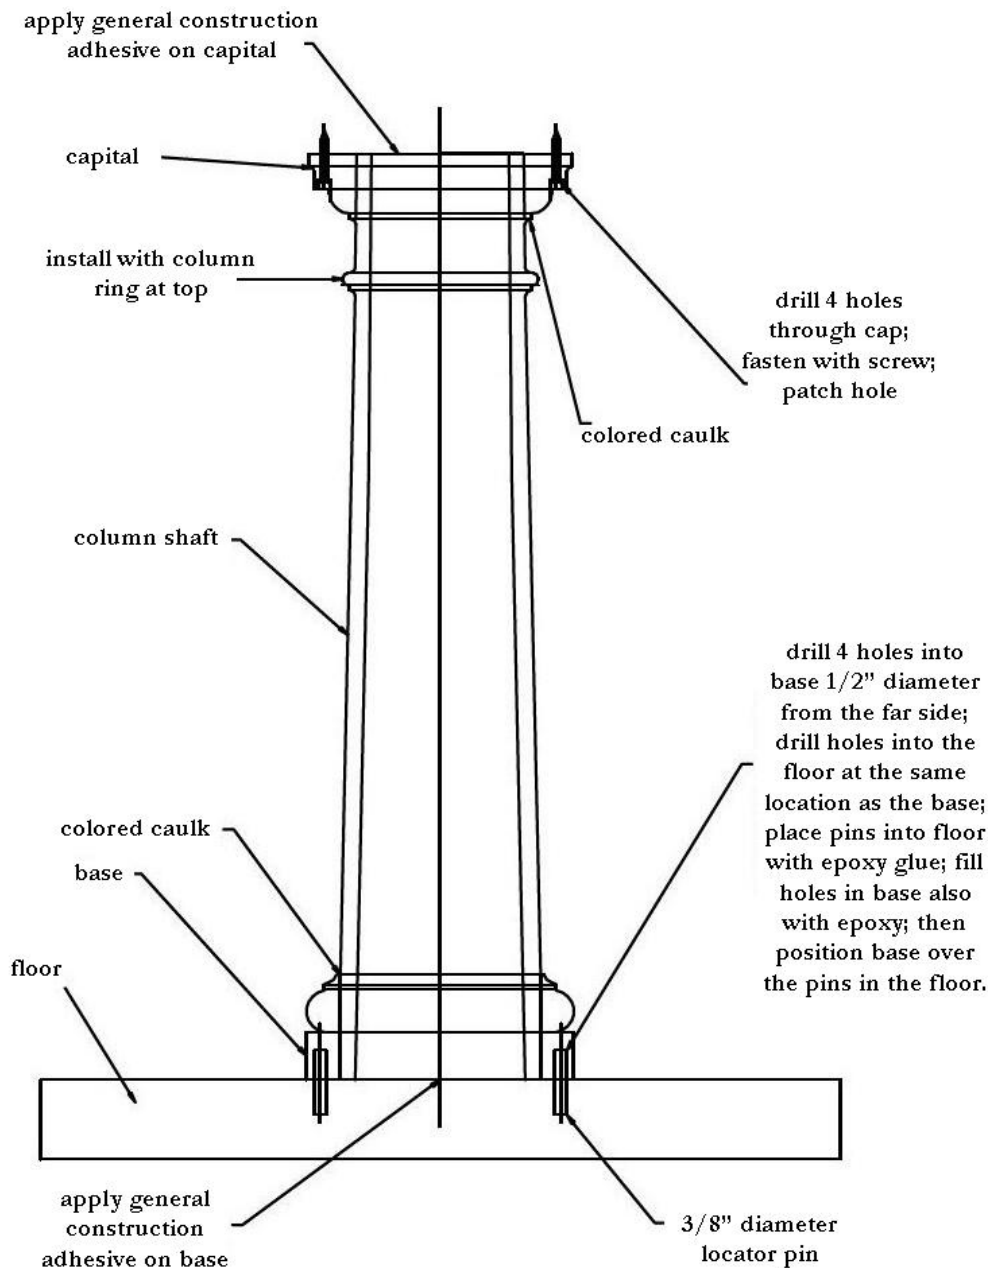

www.COLUMNS.com

CHADSWORTH INCORPORATED

277 NORTH FRONT STREET ▪ HISTORIC WILMINGTON, NC 28401 ▪ PHONE: 1.800.486.2118 ▪ FACSIMILE: 1.910.763.3191 ▪ E-MAIL: sales@columns.com