


CHADSWORTH COLUMNS



SPLITTING COLUMNS – INSTALLATION INSTRUCTIONS

HOW TO SPLIT A COLUMN

1. Secure column to sawhorses or table using blocks. Cloth material should be used between the sawhorse and bottom of column to provide cushion and protect the column from scratching.
2. Place the blocks snugly against the column ensuring that the column will remain in place while being cut. Screw in or clamp the blocks in place.
3. After the column is secured, a chalk line should be applied to the column. To lay the chalk line, place a string over the base end diameter of the column to the center of the string ensuring that the string is centered. Mark the column on the top where the string is centered, Run the chalk line from the mark on the top end of the column to the mark on the base end and snap the chalk line.
4. To make the bottom line, use a circumference measuring tape and measure the circumference distance from the top mark and place a mark on the bottom of the column.
5. Once both chalk lines have been applied to the column, you are ready to make the cut. Set the abrasive blade on the circular saw at the appropriate depth ensuring that it will pass cleanly through the bead/astragal.
6. Begin sawing from the base end moving to the bead/astragal top end. Rotate column and repeat sawing on the opposite side.

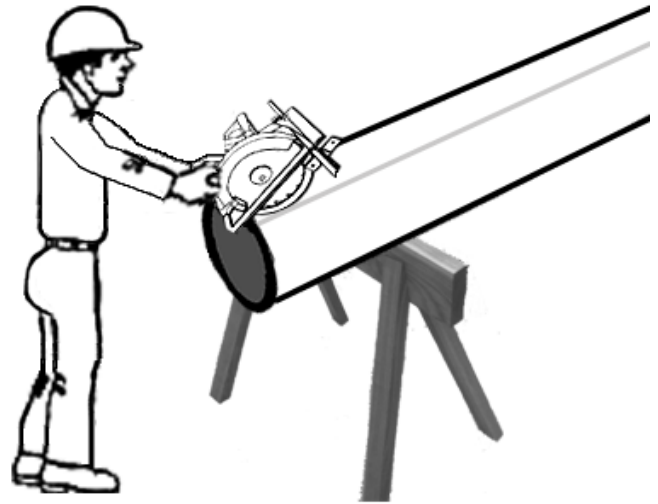

SAFETY NOTES

- Always use adequate ventilation to avoid inhaling dust. If inhaled, breathe fresh air or oxygen.
- Use safety glasses to protect eyes from dust particles. If dust does get into eyes, flush irritated area thoroughly with cold water.
- Prolonged contact with PolyStone® dust may cause irritation to some individuals. Wash with soap and water after handling.
- If eye, skin, or respiratory irritation continues consult a physician.